

**10** BRIGHT  
LED  
TECHNOLOGY  
Multi Coloured  
LED Party Light Set

**ARLEC**

PL819

**INSTALLATION INSTRUCTIONS****Warranty**

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**ARLEC**

**Arlec Australia Pty. Ltd. ACN 009 322 105 ("Arlec") gives the Warranty.**

Arlec's telephone number, address and email address are:

**Customer Service: (03) 9982 5111**

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130  
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

**Email: [custservice@arlec.com.au](mailto:custservice@arlec.com.au)**

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).

CPIN002680

**IMPORTANT!**

Please read these instructions carefully. Keep these instructions in a safe place for future reference.

The Arlec party light set is a low voltage light kit suitable for indoor or outdoor use. This light kit is ideal for decorating walls, verandas, fences or rooftops during the festive season. The low voltage transformer and LED lights means it is safer and more cost effective to run the lights for longer duration.

**The Transformer**

The transformer reduces the mains voltage from 240V down to a safe low operating voltage. The transformer is not of weather resistant construction and can only be housed indoors. The kit is supplied with suitable length wire to allow use of the lights outdoors while the transformer remains inside under shelter.

**Transformer & Kit Precautions**

- Always use the transformer supplied with the kit to operate it - check the labelling on the light chain and transformer to see that they correspond.
- The transformer is sized appropriately to the loading of the lights, and use of an incorrect transformer can damage the transformer or the lights.
- DO NOT attempt to modify the wiring in the light chain or 'cut to length'.
- DO NOT try to run more than one kit off a transformer or try to electrically interconnect two or more transformers.
- The transformer will run warm to touch, always keep it in a ventilated position; do not cover it with carpet, soft furnishings, etc.
- Keep transformers and 240 volt wiring at least 4 metres away from a pool or spa.
- Avoid using 'stacked' double adapters; use a power board instead to plug in several kits.
- If you use an extension cord, use one the right length for the purpose. DO NOT chain several extension cords.
- Always ensure the extension cord connections and power boards are not in wet areas.

**WARNING. ALWAYS UNWIND CORD BEFORE USE**

## The Lights

The globes are non replaceable LED type but have been manufactured to last for a long time. If the globes do not light up at first turn on please return to the place of purchase.

## Handling and installing the party light kit:

- Before installing the light check if all the LEDs are operating, check the operation section given below to see how to operate the lights.
- Lights should be kept out of reach of small children. Although they are low voltage children may tamper with the lights.
- Ensure the light chain and the transformer is not positioned where it can be inadvertently damaged by doors, moving objects, people or pets. Avoid passing leads through doorways and windows. The transformer supplied with this kit is not of weather resistance construction and can only be housed indoors.
- Installation hooks are pre-assembled on the globe holders to assist with installation. The installation hooks are placed approximately 720mm apart.
- Layout the party light set on the ground or floor underneath the intended route. Select the most appropriate place to supply power; make sure the transformer is subjected to indoor conditions only.
- Mark the installation hook positions and drill an eye bolt or similar type of fixing aid (not supplied with the kit). Place the installation hook over the fixing aid. Lights are now ready for use.



- Installation hook can be removed if required. Hold the hook with pliers or similar tool and pull the hook out from the globe holder.
- Plastic cable clips supplied with the kit can be used to secure the light chain. Use one clip on each side of globe to secure it in position. Additional clips can be used at intermediate positions to secure the cable.
- Take care if using ladders – ensure that you have stable footing and do not over reach
- You can run the light chain via a plug in time switch (Arlec PC607 Series 7) so that the globes will turn on and off automatically.

## Operation:

Align the plug attached to the lead in cable of the light chain with the socket on the transformer and push in the plug to secure it.

Plug In the transformer to a standard electrical socket and turn ON the mains switch. The lights are ready to use.

**Note: The party light kit can be installed outdoors but the transformer supplied is not of weather resistance construction and must be housed inside.**

## CAUTION:

- **DO NOT operate the unit in box.**
- **Disconnect from mains when not in use.**
- **If installed outdoors turn off the lights at the fixed main socket outlet in rainy or stormy weather.**
- **DO NOT leave leads lying in water or wet areas.**
- **Light chain can be installed indoors or outdoors but the transformer must only be housed indoors, subjected to indoors conditions only.**
- **DO NOT expose to direct heat or flame or submerge in water.**
- **If the light kit is damaged, light set should be discarded.**
- **LEDs cannot be replaced. DO NOT attempt to remove bulbs.**
- **While installing make sure the lead-in wire insulation is not passed over sharp objects which may damage the insulation or tamper the lights.**

## Troubleshooting: LEDs DO NOT Light Up

- Check if the unit is connected to the mains power and is switched on.
- Check if the connection between the transformer and the lead-in wire plug is securely connected.
- Check with another know working mains power outlet.